

安装说明

FIPLOCK® BHPA

Assembly instruction

FIPLOCK® BHPA



波纹管固定瓦形件

Conduit mounting half-shells

附件

More accessories

用于 FIPLOCK® 产品范围 / for FIPLOCK® product range



COPA-S

固定座

Mounting clip



CPPA

波纹管单耳固定夹

*Corrugated conduit
clamp with lug, fixing rib*



CUPA

波纹管双耳固定夹

*Corrugated conduit
clamp with double lug, fixing rib*

FIPSYSTEMS®

We simplify your world



BSPA-BJ

带球结的可堆叠重载固定座

System support stackable with ball-joint

COPA-H

带底固定座

Mounting clip with base



BSPA

可堆叠重载固定座

System support stackable



BRPA

多孔波纹管固定座

Multiple conduit mounting rail



PAPA

防撞球/连接套

Abrasion protection connecting sleeve




对于更多的产品信息, 可以访问www.fraenkische-fpss.cn或扫描二维码直接获得FIPLOCK®附件信息。

For more information about our products, please visit www.fraenkische-fpss.cn or use the QR code with direct link to the FIPLOCK® accessory range.


波纹管固定瓦形件安装说明

Assembly instruction conduit mounting half-shells

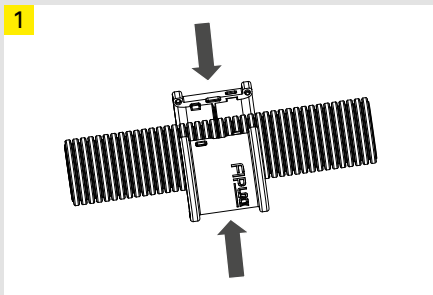


将瓦形件的两半合在一起直到听到“咔哒”一声。

Push both half-shells together till „click“ to lock.

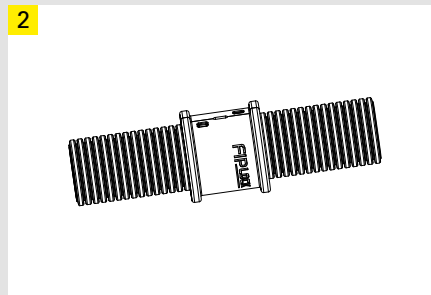


两半瓦形件合紧后能够在波纹管上自由旋转，准备将其安装在固定座上。

Freely swiveling on pre-mounted corrugated conduit and ready to install to mounting bracket.

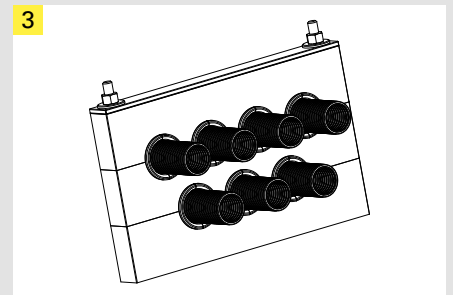


将安装好BHPA的波纹管安装在固定座上，确保波纹管没有被挤压，且可自由转动。轴向被瓦形件的筋固定，不可轴向窜动。

Corrugated conduit with BHPA applied in a mounting bracket (individual, not included) to ensure that the conduit can rotate and is not squeezed. Axial fixation by internal rib.

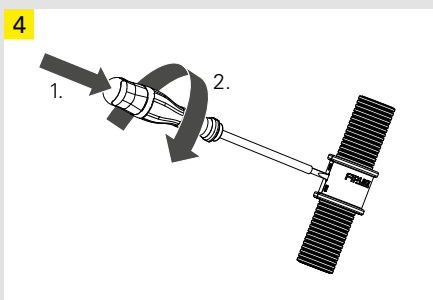

打开方式, 1. 将起子插入瓦形件之间的槽中, 2. 轻微转动一下。瓦形件两半即可打开。

For re-opening 1. push the commercial screw driver into the slot and 2. twist slightly. Half shells can be disassembled.

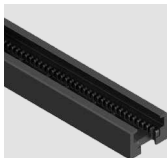

CRPA

固定滑轨

Mounting rail



CXPA

插槽螺母

Slot nut



COPA-S

固定座

Mounting clip