

安装说明

FIPLOCK® BRPA

Assembly instruction

FIPLOCK® BRPA



多孔波纹管固定座

Multiple conduit mounting support

附件

More accessories

用于 FIPLOCK® 产品范围 / for FIPLOCK® product range



COPA-S

固定座

Mounting clip



CPPA

波纹管单耳固定夹

*Corrugated conduit
clamp with lug, fixing rib*



CUPA

波纹管双耳固定夹

*Corrugated conduit
clamp with double lug, fixing rib*

FIPSYSTEMS®

We simplify your world



BSPA

可堆叠重载固定座

*System support
stackable*

COPA-H

带底固定座

*Mounting clip
with base*



BHPA

波纹管固定瓦形件

*Half-shells
axial fix*



BSPA-BJ

带球结的可堆叠重载固定座

*System support stack-
able with ball-joint*



CRPA/CXPA

带插槽螺母的固定轨

*Mounting rail
with slot nut*




对于更多的产品信息, 可以访问www.fraenkische-fpss.cn或扫描二维码直接获得FIP-LOCK®附件信息。

For more information about our products, please visit www.fraenkische-fpss.cn or use the QR code with direct link to the FIPLOCK® accessory range.


多孔波纹管固定座安装说明

Assembly instruction multiple conduit mounting support

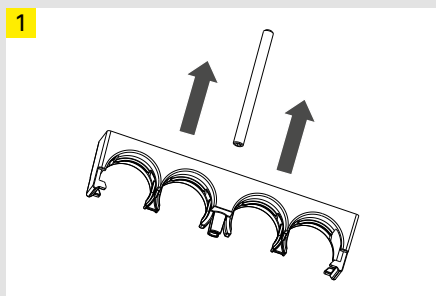


将底座推进螺杆（螺杆不包含在包装里）。底座中间孔中带了一个锁闭功能，防止底座掉落。
使用标准螺丝安装，转入第三步。

*Push support base on threaded rod (not included). Latching function for pre-mounting. (Example: over head)
To install with standard screw, start with pic 3.*

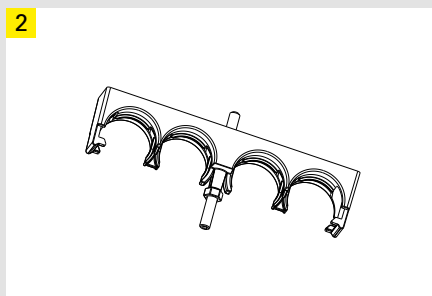


可选项: 使用一个六角螺母（螺母不包含在包装里）锁在螺杆上确保底座固定。

Optional: Screw a hexagon nut (not included) onto the threaded rod to secure the support base.

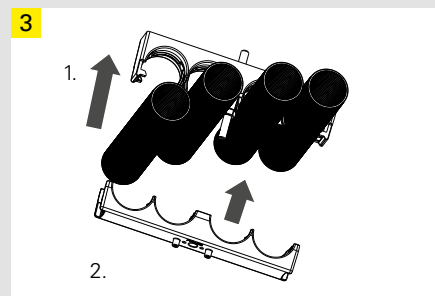


将波纹管装入固定座孔穴(1)中，然后将上盖(2)装入底座直到听到咔哒一声。

Apply corrugated conduits into the cavities (1) and push the support cover (2) onto the base until the "click".

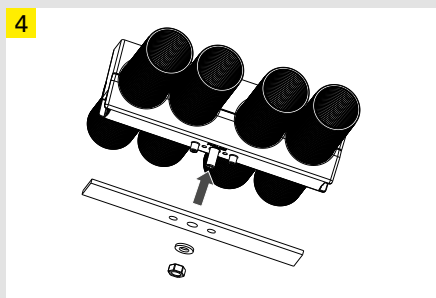

将不锈钢板穿进螺杆装入固定座上盖上。


Push stainless steel stabilizer-plate over the threaded rod onto the support cover.

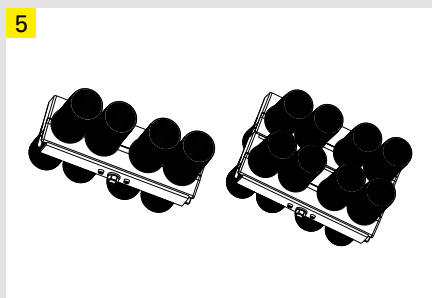

装入垫片，螺母拧入螺杆锁紧不锈钢板。或使用标准螺丝将装配好的固定座安装到箱体板面上。
如果需要将固定座堆叠使用，就需要一根更长的螺杆或标准螺丝。在这种情况下按照第一步的步骤开始安装。

Tightly secure stabilizer-plate with washer and Locknut on threaded rod. Or apply standard screw to tight assembled support to the pannel.

For stacking application a longer threaded rod or a longer standard screw is required. In this case start procedure form beginning.

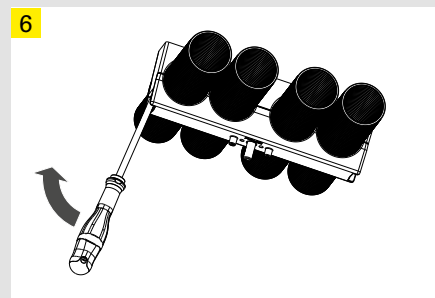

拆卸时，先松掉螺母取出不锈钢板。打开固定座上盖时，使用一个起子插入两侧的倒扣内，向外轻轻扳动，即可打开上盖。

To dismantel, release stabilizer plate nut and remove stabilizer plate.

To open support cover, use a commercial screw driver. Apply it behind the snap-fit at the side and slightly bend it to release cover lock. Pull-off corrugated conduits from support base.



BRPA 2

两孔波纹管固定座

*Double conduit
mounting rail*



BRPA 3

三孔波纹管固定座

*Tribble conduit
mounting rail*



BRPA 4

四孔波纹管固定座

*Four cavities conduit
mounting rail*