

安装说明

FIPLOCK® BSPA / BSPA-BJ

Assembly instruction

FIPLOCK® BSPA / BSPA-BJ



BSPA



BSPA-BJ



可堆叠重载固定座带/不带球结

*System support stackable
with/without ball-joint hinge*

附件

More accessories

用于 FIPLOCK® 产品范围 / for FIPLOCK® product range



COPA-S

固定座

Mounting clip



CPPA

波纹管单耳固定夹

*Corrugated conduit
clamp with lug, fixing rib*



CUPA

波纹管双耳固定夹

*Corrugated conduit
clamp with double lug, fixing rib*

FIPSYSTEMS®

We simplify your world



BRPA

多孔波纹管固定座

*Multiple conduit
mounting rail*

COPA-H

带底固定座

*Mounting clip
with base*



PAPA

防撞球/连接套

*Abrasion protection
connecting sleeve*



BHPA

轴向固定瓦形件

*Half-shells
axial fix*



NKPA

边缘保护螺母

Edge protection nut




对于更多的产品信息, 可以访问www.fraenkische-fpss.cn或扫描二维码直接获得FIP-LOCK®附件信息。

*For more information about our products, please visit www.fraenkische-fpss.cn
or use the QR code with direct link to the FIPLOCK® accessory range.*


可堆叠重载固定座安装说明 带/不带球结

Assembly instruction system support stackable with/without ball-joint hinge

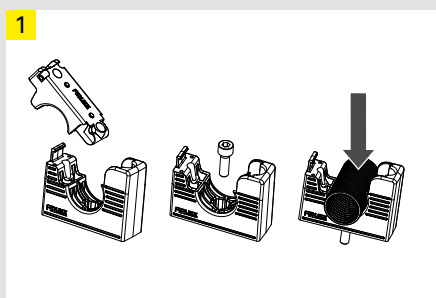


打开上盖，安装中间固定螺丝（不包含在包装里），安装波纹管。

Open cover, apply central fixing screw (not included), insert corrugated conduit.

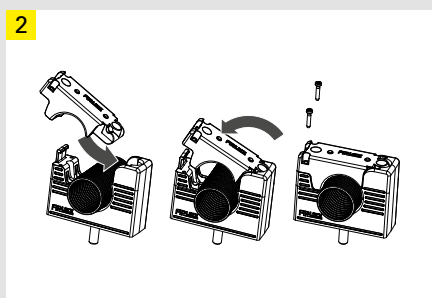

将上盖斜向滑入底座，合上，听到一声咔哒声。用两个小螺丝锁紧上盖。


Slide cover into system support, close it with „click“ to lock and secure it with two screws.

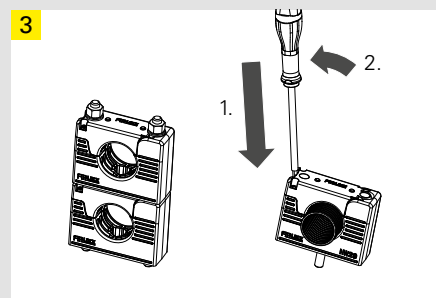

用带垫片及螺母的螺杆或长螺丝将单个或多个固定座锁紧固定。（包装不含螺杆或螺丝）需要打开的话，在拆掉所有螺丝后，用起子在上盖侧面的倒扣处插入轻轻往外扳一下即可打开上盖。

To fix a single or stacked system support use a threaded rod with washer and nut or a long screw (not included). To open remove/release all screws and open cover by slightly bending the applied commercial screw driver.


4 仅用于 BSPA-BJ / only for BSPA-BJ

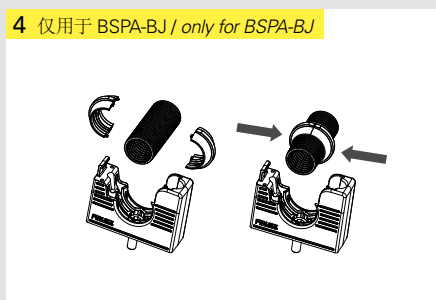

对于带球结的固定座BSPA-BJ，安装时将两个半圆球结扣在波纹管上，合紧。

For ball-joint option BSPA-BJ, push both ball half-shells together at foreseen position till the „click“.


5 仅用于BSPA-BJ / only for BSPA-BJ

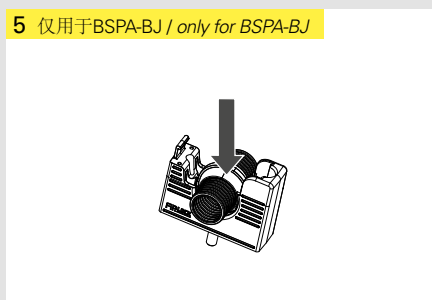

安装底座中间的固定螺丝，然后将装好球结的波纹管安装在底座上。然后按照上面第2步操作。

Apply central fixing screw, insert corrugated conduit together with both half-shells into system support. Continue with Pic. No. 2.

6 仅用于 BSPA-BJ / only for BSPA-BJ

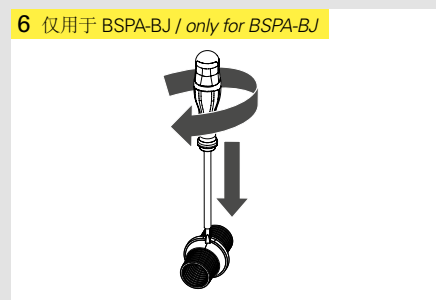

需要打开球结时，用一个起子插入两半球结之间的槽，轻轻扭动，两半球结即可打开。

For re-opening push the commercial screw driver into the slot and twist slightly. Half shells can be disassembled.



BRPA 2

双波纹管固定座

*Double conduit
mounting rail*



BRPA 3

三波纹管固定座

*Tribble conduit
mounting rail*



BRPA 4

四波纹管固定座

*Four cavities conduit
mounting rail*